



24 Volt 8 Amp

MOBILITY
24 Volt Battery Charger

SMART 5-STAGE
BATTERY CHARGER & MAINTAINER



The PX-2408M Oz Charge Battery Charger & Maintainer has been designed in Australia specifically to suit all conventional lead-acid type batteries (Gel, AGM & Wet).

The new 5-Stage charging process allows for seamless performance and true reliability and can be left on 24/7 to ensure your battery is always maintained and left fully charged.

Fully automatic, this powerful little unit also contains a patented rejuvenation and equalisation stage to Extend the Life of your Battery and if that wasn't all, it allows you to select different battery types and charge rates. It also boasts a low power consumption mode.



SMART CHARGE
AUTOMATIC REJUVENATION



SAFETY TIMERS
PREVENTS OVERCHARGING



MULTI STAGE
FOR MAXIMUM BATTERY LIFE



UNIVERSAL
AGM, GEL, WET & CALCIUM



IP51 CERTIFIED
APPROVED FOR USE WITH WHEELCHAIRS




ECO MODE
ULTRA LOW POWER CONSUMPTION AND ENERGY SAVING MODE



REVERSE POLARITY & SHORT CIRCUIT PROTECTION

Model: PX-2408M - 24 Volt 8 Amp FEATURES AND SPECIFICATIONS

Input	220-240VAC 50Hz	Electrical compliance	AS/NZS 60335.2.29
Power Consumption (Max)	1.6A (108W)	EMC compliance	AS/NZS CISPR 14.1
Output voltage	24V nominal	IP rating	IP51
Output current (Constant/Peak)	8 Amp	Battery types supported	VRLA (all AGM, Gel, SMF & WET)
Boost charge voltage	29V	Display	LED
Float trickle charge voltage	28.8V	Connections	Amphenol 'XLR' Connector
Cooling fan	No	Warranty	2 years
Safety timers	Yes	Nationwide support	Yes
Short circuit protected	Yes	Weight	1.7Kg (approx.)
Reverse polarity protected	Yes	Dimensions (LxWxH)	185 (L) x 153 (W) x 70 (H) mm

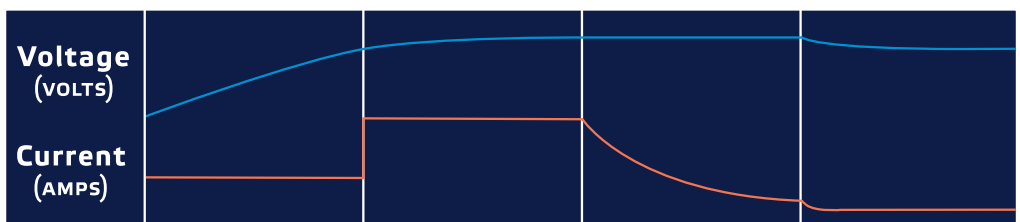

CHARGING / MAINTAINING PROCESS

SOFT START Increases your battery life by gently starting to charge the battery until the battery reaches a set voltage.	BULK CHARGE Reduces charging time by delivering maximum charge until the battery reaches a set voltage.	ABSORPTION Uses constant voltage and ensures the battery receives a full charge without overcharging the battery.	FLOAT Maintains the battery at 100% charge.
--	---	---	---

2 YEAR NATIONWIDE CHANGE OVER WARRANTY PROGRAM
THROUGHOUT AUSTRALIA & NEW ZEALAND

www.ozcharge.com.au

3 Ah

Ideal for Charging

240 Ah

Ideal for Maintaining only

360 Ah

EXTEND THE LIFE OF YOUR BATTERY

